

Change your Tenda Wi-Fi password

Secure your wireless network by changing its network name or password.

Important

The router administrator password and the Wi-Fi password are different. Store both securely.

Change the password

1. Connect to the router by Wi-Fi or network cable.
2. Open a browser and enter `http://192.168.0.1` or the router address printed on its label.
3. Sign in using the router administrator password.
4. Open Wireless Settings, Wi-Fi Settings or Wireless Security.
5. Choose the correct 2.4 GHz or 5 GHz network if they are listed separately.
6. Enter a new Wi-Fi password of at least 12 characters. Avoid names, phone numbers and obvious words.
7. Save or Apply the setting.

Reconnect your devices

- The router may restart or disconnect you.
- On each phone, computer, television or camera, forget the old Wi-Fi network and reconnect using the new password.
- Update any devices that use the network automatically, including printers and CCTV equipment.

If you are locked out

Connect a computer to a LAN port with a network cable and sign in again. Do not factory-reset the router unless EdelNet support confirms that a reset is appropriate.